 




Verizon Wireless CDM 7075 interior screen replacement

This guide will instruct you on how to replace the LED screen on the Verizon Wireless CDM 7075.

Written By: Corey Ryman

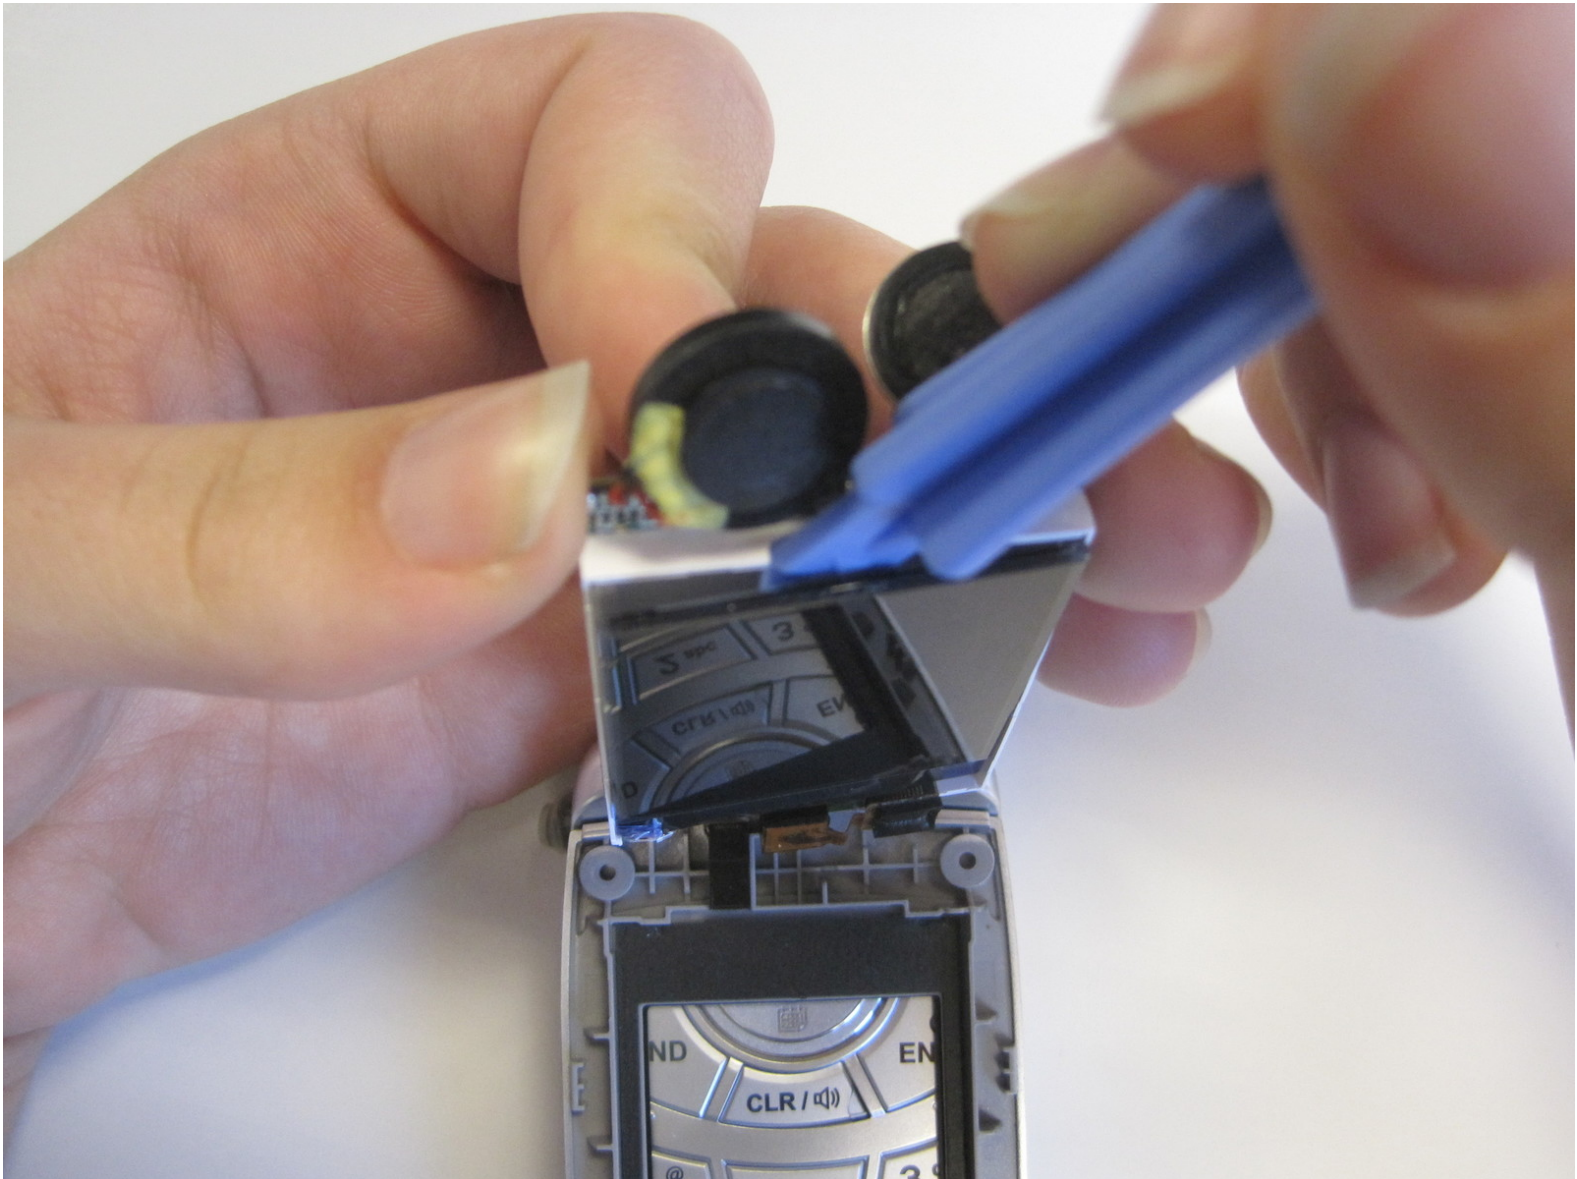

INTRODUCTION

Please ensure you have followed the prerequisite guide of removing the battery before proceeding with this guide.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Depress the gray button on the back panel of the cell phone.

Step 2



- Press down and slide the back panel to remove it from the phone, while continuing to hold the gray button.

Step 3



- Carefully remove the battery from the phone, prying from the top.

Step 4 — LED Screen



- Remove the rubber plugs from the screw holes around the screen.

Step 5



- Remove the four screws from around the phone's screen.

Step 6



 
- Pry the top cover off the phone with a plastic opening tool.

Step 7



- Remove the screen assembly from the phone.

Step 8

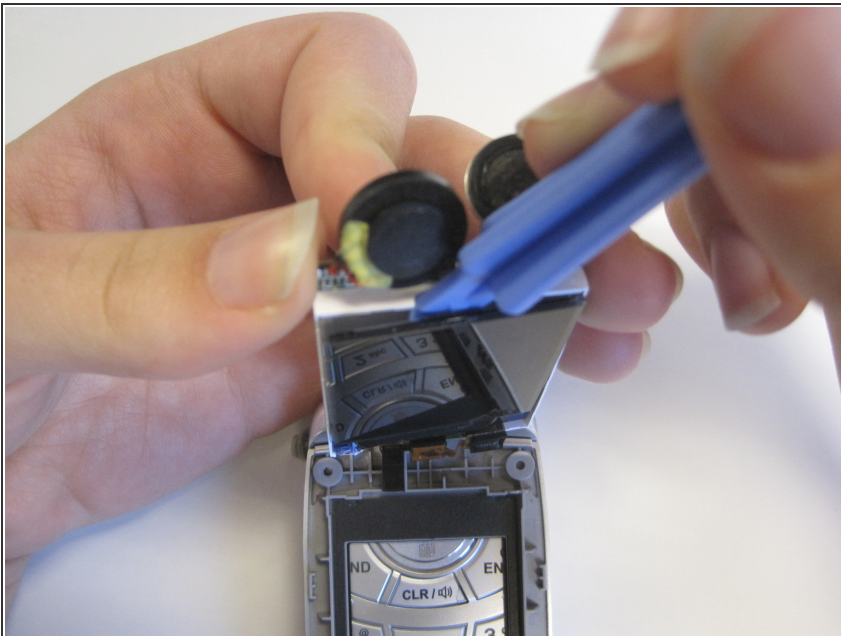

- Pry the screen off the circuit board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 10:07:54 PM.